


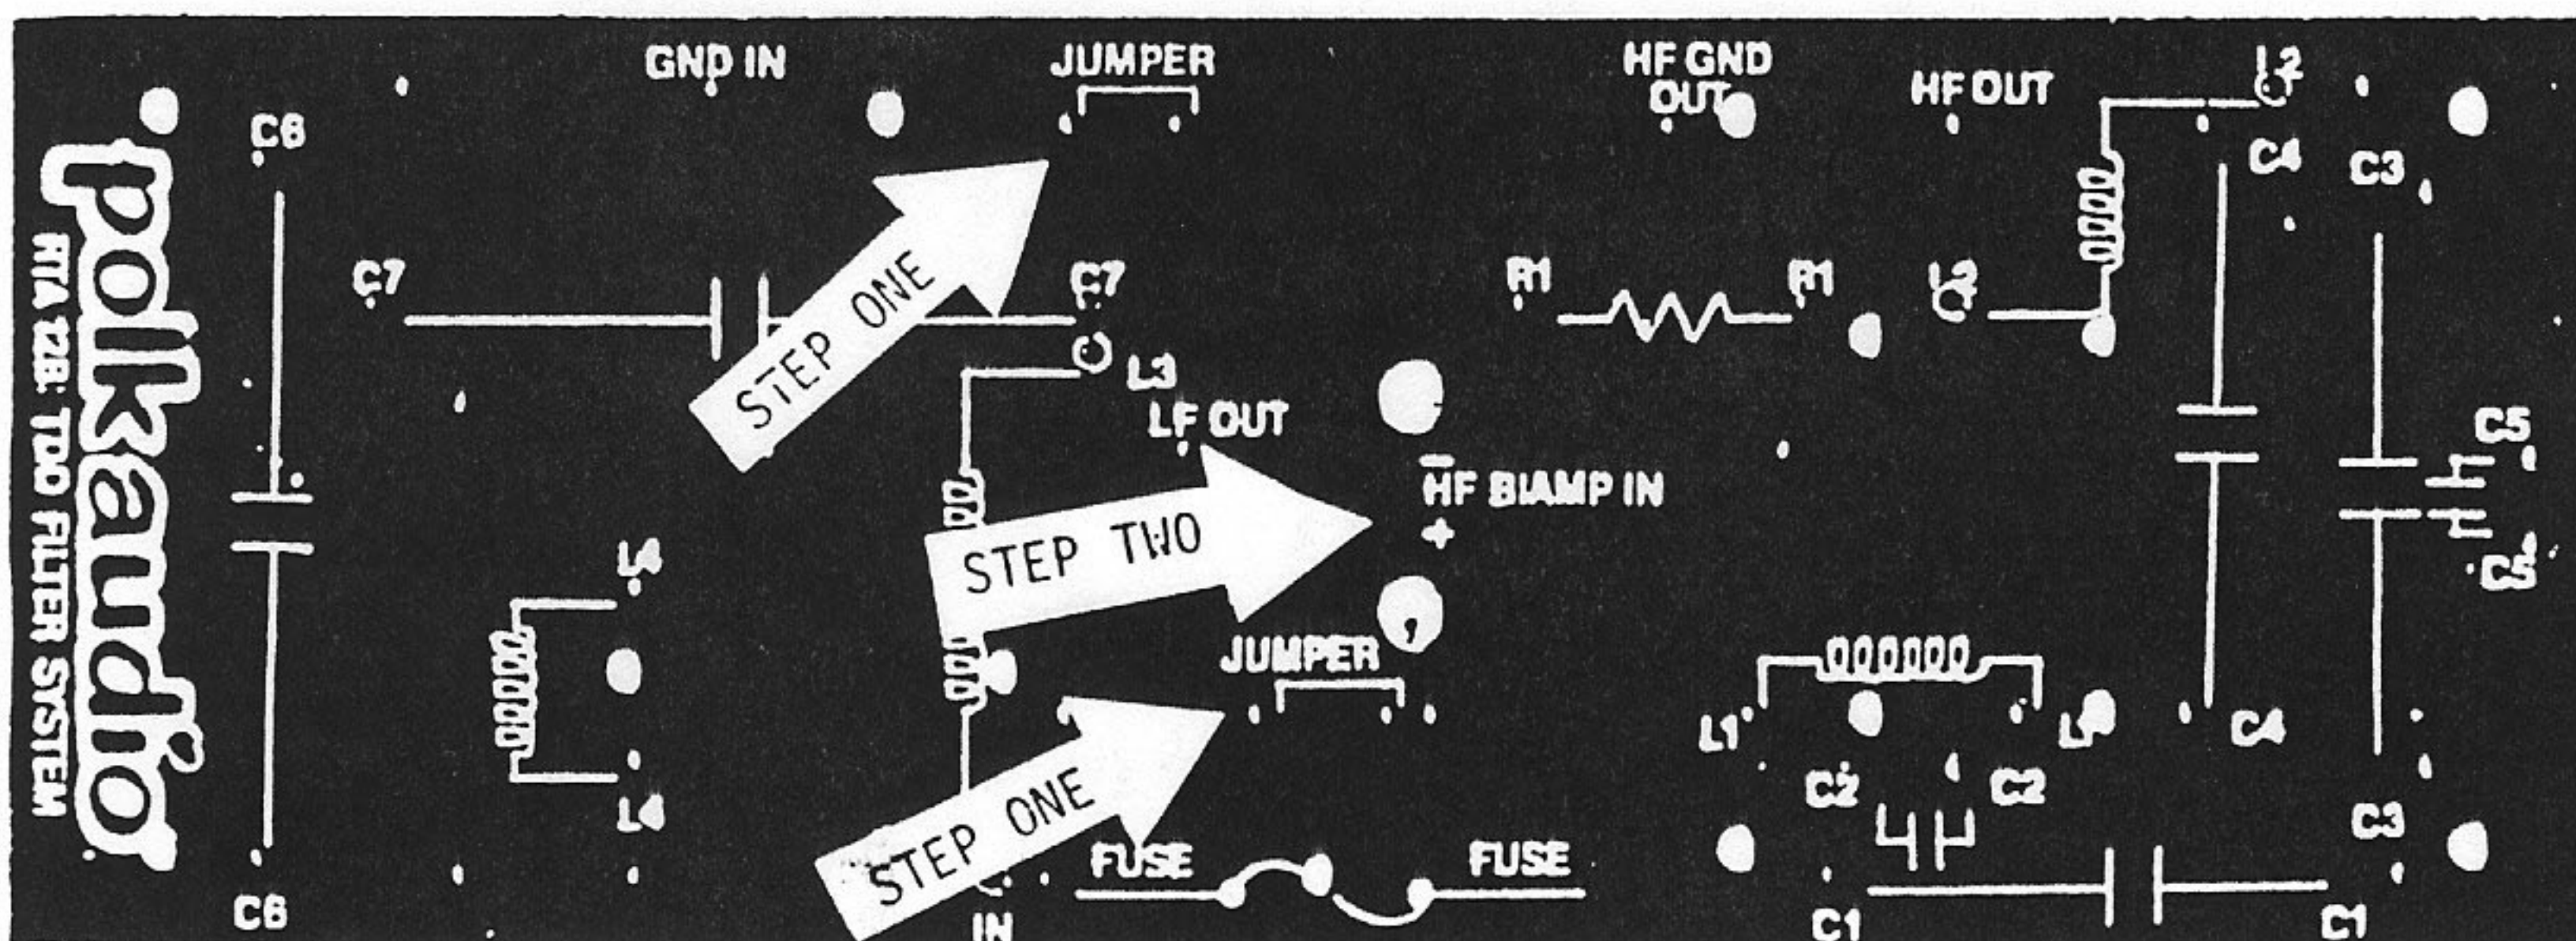

BIAMPLIFICATION OF THE RTA 12

STEP ONE - UNSOLDER AND REMOVE BOTH WIRES MARKED JUMPERS FROM THE HFM CROSSOVER BOARD.

STEP TWO - INSTALL THE TWO BINDING POSTS SUPPLIED WHERE IT IS MARKED HF BIAMP IN

NOTE: THE RED BINDING POST TO THE + AND THE BLACK BINDING POST TO THE -

STEP THREE - CONNECT THE HIGH FREQUENCY AMPLIFIER TO THE HF BIAMP INPUT AND THE LOW FREQUENCY AMPLIFIER TO THE BACK OF THE LFM (LOW FREQUENCY MODULE)

REMEMBER TO RECONNECT THE HFM (HIGH FREQUENCY MODULE) TO THE LFM (LOW FREQUENCY MODULE)